

FRONTFENDER

FÜR HARLEY-DAVIDSON BREAKOUT (2013-)



PACKLISTE:

Menge	Beschreibung
1	Frontfender
2	Hülse
2	Inbusschraube 5/16*3/4 UNC
2	Inbusschraube 5/16*1/2 UNC


MONTAGEANLEITUNG:

Demontieren sie den originalen Frontfender von der Gabel.

Hinweis: Montieren Sie den Frontfender vorerst probeweise mit 10mm Luft zum Reifen, um die Passgenauigkeit zu überprüfen! Erst dann sollte der Frontfender lackiert werden!

Befestigen Sie die neuen TB-Frontfender mit den beiliegenden Inbusschrauben an der Gabel.

Achtung: Platzieren Sie die beiliegenden Hülsen dabei linksseitig zwischen Fender und Gabel!

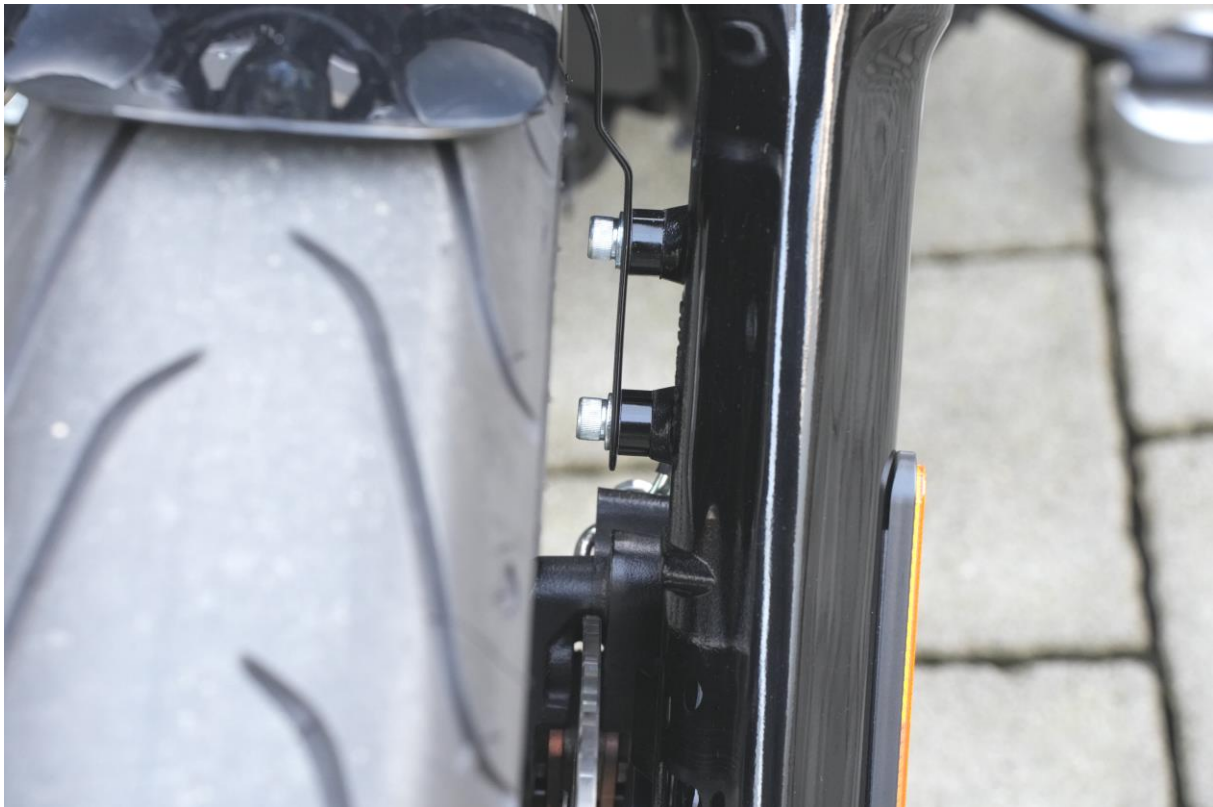

Das Thunderbike-Team wünscht viel Vergnügen.
Gute Fahrt!



THUNDERBIKE

Güterstraße 5
46499 Hamminkeln
Germany

Phone: +49 2852 6777 80
Mail: info@thunderbike.de

FRONT FENDER

FOR HARLEY-DAVIDSON DYNA BREAKOUT (2013-)



PACKING LIST:

Amount	Item
1	Front fender
2	Spacer
2	Allen head screw 5/16*3/4 UNC
2	Allen head screw 5/16*1/2 UNC


MOUNTING INSTRUCTIONS:

Remove the oem front fender from your fork.

Tip: First mount the raw fender to check clearance between fender and tire (10mm). Then the fender can be painted!

Mount the new TB front fender to the fork using the included Allen head screws.

Attention: Install the spacers between the left fork pipe and the front fender with this step!

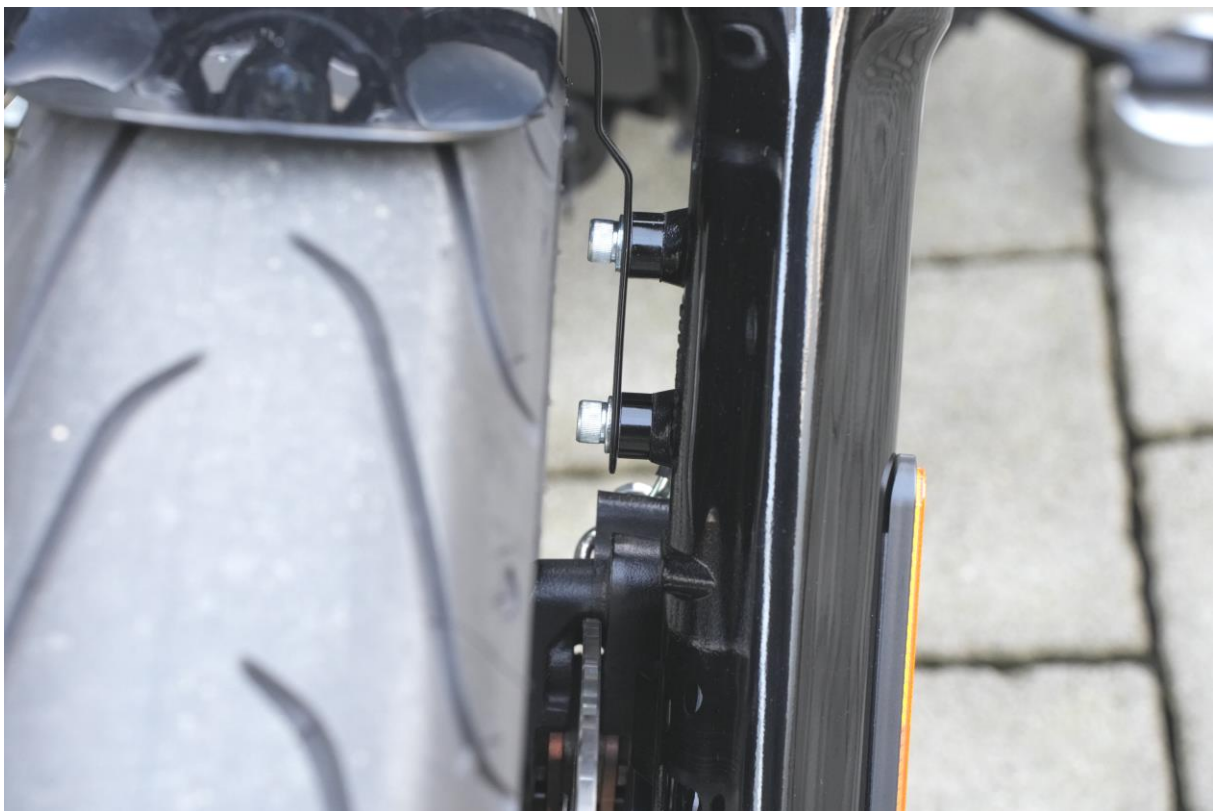

The Thunderbike team wishes you fun with your new parts.
Have a nice and safe ride!



THUNDERBIKE

Güterstraße 5
46499 Hamminkeln
Germany

Phone: +49 2852 6777 80
Mail: info@thunderbike.de